

# BSNL FTTH – Configuration.

.....  
IP : 192.168.1.251

.....  
User name : root

Password : admin

.....  
Network - WAN – PPOE

.....  
User name : **he4852981379\_sid@ftth.bsnl.in**

Password : **password**  
.....